

Puffin Swift Assembly and User Information

ScanSport, Inc. / Pakboats 234 May St Post Office Box 700 Enfield, New Hampshire 03748 USA Phone: (888) 863-9500 (toll free) From outside the US: +1 (603) 632-9500 Fax: (603) 632-5611 Email: info@pakboats.com www.pakboats.com



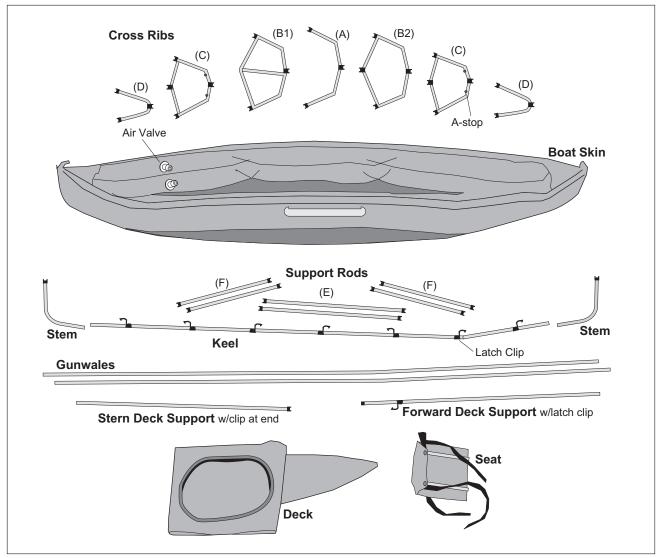


Figure 1, Parts

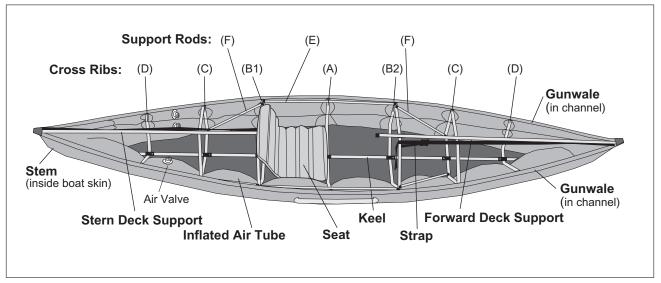


Figure 2, Assembled (deck removed)

Assembling the Puffin Swift

- NOTE! We recommend that you study this manual carefully before you start the assembly procedure! When assembling the Puffin Swift, please refer to Figure 1 and Figure 2 of this manual.
- 1. Roll out the *boat skin* and assemble all the rods.
- 2. Insert both *gunwales* as far as they will go. Close the black flaps to cover the ends.
- 3. Assemble *keel* and *stems*.
- 4. Position *keel* and *stems* inside the boat skin.
- 5. Clip *tube stubs* at end of *boat skin* onto the *plastic fittings* on top of the *stems*.

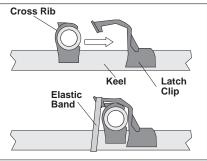


Figure 3, Latch Clip

6. Mount *cross rib (C)* at the angle point of the keel.

→ The sections of the long rods are internally connected by elastic cords to ensure correct assembly.

→ The two longest rods are *gunwales*. They are to be inserted in channels along the edges of the *boat skin*. The channel openings are under black flaps at one end of the skin.

→ The curved pieces with plastic fittings are *stems*. The narrow end of the *stems* fit into the *keel*.

→ The *keel* will now be at an angle.

→ The cross ribs are connected to the keel by means of latch clips. Each cross rib has a plastic clip at the center. Position this clip on the keel as shown in Figure 3 and press in the direction of the arrow until the latch clip locks. Mount the elastic band to secure the locking.

→ The ends of the *cross ribs* clip to the *gunwales* at openings in the *gunwale channels*.

→ To install *rib* C the keel angle is moved to the center of the kayak.

→ As *the cross ribs* are installed the *keel* will gradually straighten.

NOTE: The hull is symmetrical. It does not matter at which end *cross ribs* (*B1*) and (*B2*) are installed.

- 7. Mount cross ribs (A), (B1) and (B2).
- 8. Mount the three remaining *crossribs*, (*C*) and (*D*).

→ The rear part of the kayak will be where rib (*B1*) is installed.

→ Make sure the *keel* is straight and the *stems* are centered in the ends of the *boat skin*.

NOTE: Cross ribs lock to the *gunwales* when the "wing" on the connecting clip is aligned with the *gunwales*.

9. Inflate *upper air tubes* just enough to give a little pressure. Inflate *lower air tubes* alternately until they feel hard (about as much as you can easily do with the pump provided). Continue inflating *upper air tubes* alternately until full pressure is obtained.

→ Make sure the *keel* is straight during the iinflation. If it bowes to one side, add more pressure to the *air tubes* on that side. The hull is straight when the *keel* is between the two white lines.

10. Mount the forward deck support.

→ The straight rod with a *latch clip* close to one end, is the *forward deck support*. The *latch clip* will attach to a corresponding clip at the top of *cross rib* (*B2*). The clip at the other end of the rod should be attached to the stem near the top.

11. Locate the *strap* attached to the front end of the *boat skin* and secure *cross rib (B2)* as shown in *Figure 4.*

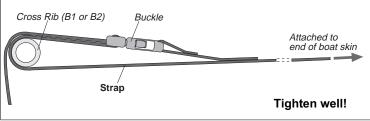


Figure 4, Securing Cross Ribs (B1) and (B2)

12. Mount the stern deck support.

→ The straight rod with a *clip* at each end, is the *stern deck support*. One *clip* will attach to the top of *cross rib* (B1). The other end of the rod should be attached to the stem.

- 13. Locate the *strap* attached to the rear end of the *boat skin* and secure *cross rib* (*B1*) as shown in *Figure 4.*
- 14. Inflate the seat.
- 15. Mount the seat.

→ The *seat* should not be completely full of air.

→ The seat is placed with the aluminum frame to the back against cross rib (B1).

Front seat-straps: Around *cross rib* (*A*) and back to snap.

Back seat-straps: Run longest end under *cross rib (B1)* and *keel,* and buckle to short end.

The *seat* is equipped with additional straps on each side for back adjustment.

16. Mount <i>support rods (E)</i>	→ The two longer rods with a <i>clip</i> at each end, are <i>support rods</i> (<i>E</i>). The <i>support rods</i> (E) are attached, on each side, between the <i>cross braces</i> of <i>cross ribs</i> (<i>B1</i>) and (<i>B2</i>). Mount the rods as near to the <i>gunwales</i> as possible.
17. Mount <i>support rods (F)</i> .	 → The four shorter rods with a <i>clip</i> at each end, are <i>support rods</i> (<i>F</i>). The <i>support rods</i> (<i>F</i>) are attached, on each side, sloping between the <i>cross braces</i> of <i>cross ribs</i> (<i>B1/B2</i>) and <i>the lower part of</i> cross rib (<i>C</i>). <i>NOTE:</i> At the (<i>C</i>) end, attach the <i>support rib</i> (<i>F</i>) on the outer side of the <i>stop</i>. At the (<i>B1/B2</i>) end, the <i>support rib</i> (<i>F</i>) is attached next to the end of <i>rod</i> (<i>E</i>).
18. Hook "short" end of <i>deck</i> over the stern (boat's rear end) and pull other end of <i>deck</i> towards the boat's front end.	→ Both ends of the <i>deck</i> must be in place before the <i>hook and loop fastener</i> along the edge of the deck is attached to the hull.

Support the boat with your foot while stretching the *deck* to fit over the bow.

The Puffin Swift is now complete.

Note!

• Reduced pressure in the *air tubes* is common if you assemble the boat on a warm, sunny day and go paddling in cold water. Under these conditions you should add some extra pressure during assembly.

Disassembling the Puffin Swift

Disassembling is essentially the assembly process in reverse, but there are a few important details:

- → Undo all the hook and loop fasteners before you try to get the ends of the deck off.
- → Open the *air tube valves*.
- → To remove the *gunwales*:
 - Open the *black flaps* to expose the *gunwale ends*.
 - Grip the exposed end of the *gunwale* and lift it above the *gunwale channel*.
 - Make sure the *gunwale* does not have fabric tightly around it.
 - Torque the *gunwale* so it forms an arc and pull it out. It should slide out easily.
 - If the gunwales do not slide out easily
 - Move to the other end of the boat
 - Grip the side fabric on one side just below the *gunwale*, about a foot (30 cm) from the end.
 - Push with the other hand against the end of the *gunwale*.
 - Straighten the *boat skin*, move your hands, and repeat the process on both sides of the boat until the *gunwales* can easily be pulled out.
- \rightarrow Roll up the *boat skin* from the end opposite the *valves*.

Safety

- Always wear a personal flotation device.
- Know your abilities and do not exceed them.
- Be aware of changing weather conditions.

General Information

Storage Your Puffin Swift is equally happy stored assembled or packed in the bag.

- Salt WaterFollowing exposure to salt water, rinse the Puffin Swift in fresh water if you can.
This will help preserve the Puffin Swift's appearance.
- **Repairs** HULL If you need to repair a puncture or abrasion of the hull, use a patch of the same material and the repair kit adhesive. Cut a patch to cover an area about 3/4" past the damaged area of the hull. Round the corners of the patch. Cover the patch and the area the patch will cover with a thin coat of adhesive. Wait until the adhesive feels dry to the touch and immediately apply patch. Press down well. The adhesive will cure for twenty-four hours, but the Puffin Swift can go in the water immediately after a patch is applied.

AIR TUBES - A puncture of an air tube can be repaired the same way as the hull.

Small punctures may be repaired without a patch. Coat the puncture repeatedly with the repair kit adhesive, letting the adhesive dry between each coat. *NOTE: There must be no pressure in the tube or seat when being repaired.*

ScanSport, Inc. / Pakboats

234 May St Post Office Box 700 Enfield, New Hampshire 03748 USA Phone: (888) 863-9500 (toll free) From outside the US: +1 (603) 632-9500 Fax: (603) 632-5611 Email: info@pakboats.com www.pakboats.com

